


## S-Series Wiring (typical)

Where coil and control voltage = 2 Solenoids @ 120-vac and Fan  
Only where ISIMET does not provide control device.

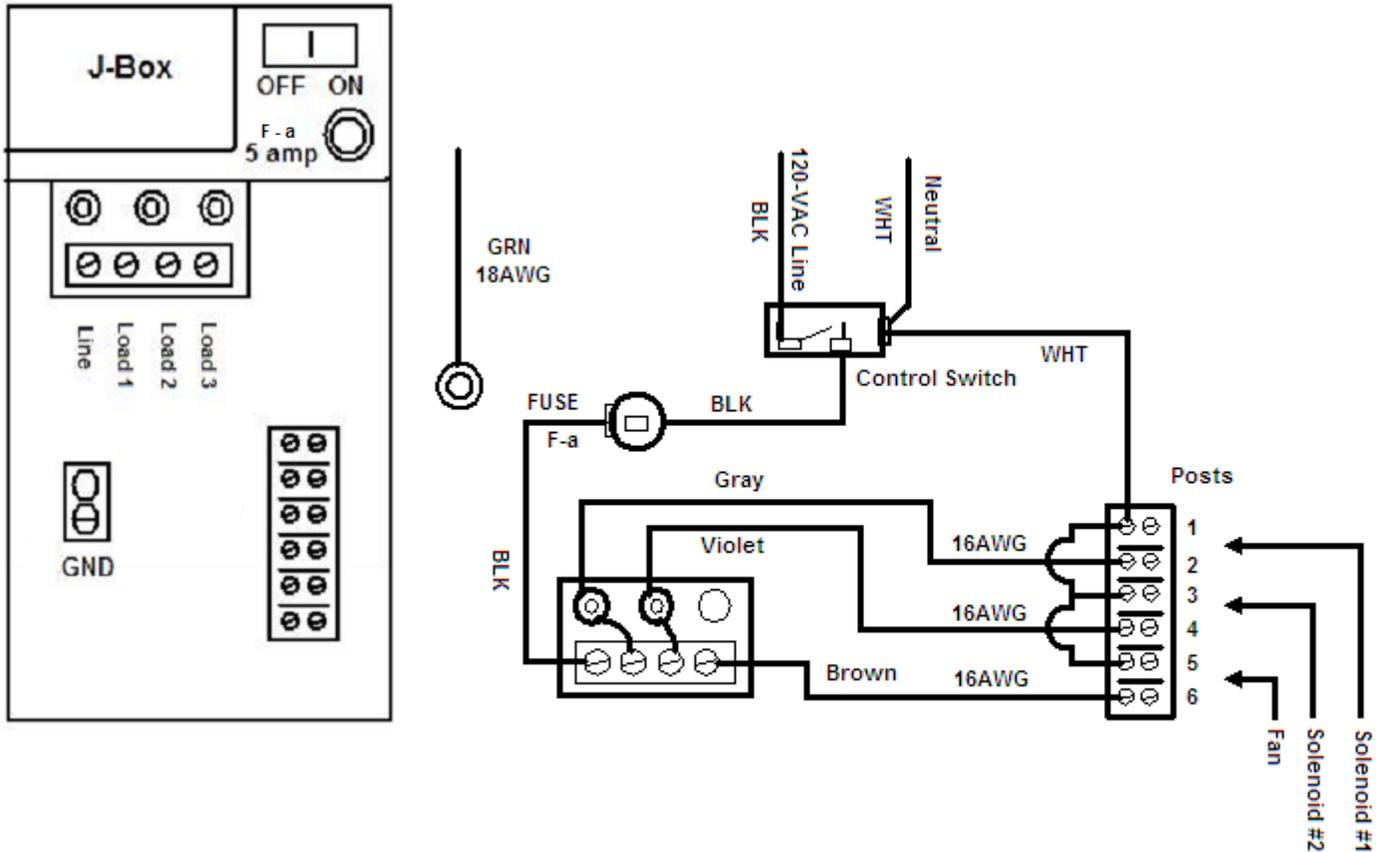

### Wiring Instructions:

This S-Series Unit is provided with a junction box, panel switch, Fuse and terminal for connection of line voltage and Line and Load wiring termination points for connection of a power switch to operate the solenoids provided within this enclosure.

Make connection to switch at Line terminal(s). and returning wiring at Load terminal(s). Loads operated by a single switch should be connected with buss wire.

Reset Fused Switches not used have been omitted.